

cinch™

Meet Your Pedometer

We call him Buster

Hello

I'm Buster and I'll be your pedometer.

I promise to be with you through thick and thin. Stick with me and you'll like what you see. I'll help you bust a move. Bust off inches. And bust through your barriers.

So wear me. Walk with me.

Take me with you!

Getting to know me

Put me on (oh, you're putting me ON!) Hold my belt clip open, GENTLY PLEASE. Slide me onto your belt. I also work well on the top edge of pants and skirts—if you wear me there, be sure I fit snugly and on the level, above one knee.

NOTE: I've been known to get confused when I'm not worn correctly, and I won't work if I am slumped over or on my side. Believe me, I really want to give you all the step credits you deserve. So, if you happen to be a person of the larger persuasion, you may find it helpful to wear me farther back on your body, toward one hip.

Also, my cover must be closed, or I just won't work. Don't try to talk me into any other way. My mind is as closed as my cover. And PLEASE don't drop me! You might end up hurting more than just my feelings.

My display shows your step count since last reset, up to 100,000 steps.



White Button: RESET

Viewing your results

Once you put me on with the cover closed, I will automatically begin to record your steps.

Resetting me

To reset: press and hold the white RESET button for at least 2 seconds.

Replacing my battery

When my display dims or goes blank, it is time to replace the battery. I use one Type L1142 (LR43) 1.5 volt alkaline battery, or one type 1132S0 (SR43) silver oxide battery for longer life.

1. Insert a dime or penny into the slot on the front of my case. Twist counterclockwise 1/8th turn to loosen and remove the battery door.
2. To remove the battery, use a pointed object, such as a pen, to lift the edge of the battery, using the small slot at bottom right of battery compartment. Now, shake the battery out of its slot.
3. Hold the new battery and turn it so the "+" side is facing up. Now push it down (initially at an angle towards the back of the case) and back into the battery recess, until it is all the way inside.
4. Reinstall the battery cover by gently sliding the cover around until it pops into place and sits flush with the case. Then twist the battery cover only 1/8th turn in the clockwise direction to tighten.

My warranty info

5-Year, Limited No-Proof-of-Purchase Warranty Model: AE2720STEP with TW17 PedometerEngine.™ Warranty service is free for the first year of ownership. Warranty service is available for a \$10 fee thereafter. See label on the inside cover of your pedometer for warranty date.

For warranty service, please contact: support@accusplit.com or call 925.290.1900 or visit support.accusplit.com/shaklee.html

©2006 ACCUSPLIT Made in Taiwan.