 


MODEL AE120XL ACTIVITY PEDOMETER OPERATING INSTRUCTIONS



BATTERY REPLACEMENT
When the LCDisplay dims, replace the battery with LR-44 or equivalent.
-Use a coin to "pop open" the case.
-Replace battery with "+" up.
-Snap case parts together.

FOR BEST RESULTS
-Clip the pedometer firmly at your waist, above a knee. Or, slide the pedometer toward your hip until the case is nearly straight up and down. If the pedometer is tilted, the step count may be under-recorded, because the pendulum may not function correctly.



STEP COUNT MODE
-Measures ALL ACTIVITY Steps.

RESET
-Press (RESET) to reset Steps to 0.

MASTER RESET/POWER OFF
-Press (RESET) button for 3 seconds and release (All LCDisplay segments will be ON and then OFF)
-Press (RESET) button again to turn it ON.

