


# MODEL AX120 ACTIVITY PEDOMETER OPERATING INSTRUCTIONS

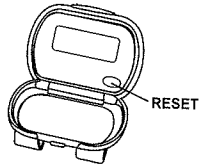

### FOR BEST RESULTS


-Clip the pedometer firmly at your waist, above a knee. Or, slide the pedometer toward your hip until the case is nearly straight up and down. If the pedometer is tilted, the step count may be under-recorded, because the pendulum may not function correctly.

### STEP COUNT MODE

-Measures ALL ACTIVITY Steps.

### RESET

-Press (RESET) to reset Steps to 0.

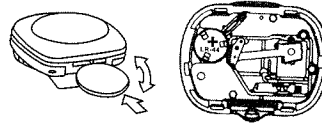

### RESET/POWER OFF

-Press (RESET) button for 3 seconds and release (All LCDisplay segments will be ON and then OFF)  
-Press (RESET) button again to turn it ON.

### BATTERY REPLACEMENT

When the LCDisplay dims, replace the battery with LR-44 or equivalent.  
-Use a coin to "pop open" the case.  
-Replace battery with "+" up.  
-Snap case parts together.

